Symptom	Solution
1 long beep and 2 short beeps when you turn on the system.	* The VGA adapter is not properly seated in the expansion slot is dirty. Reseat the VGA adapter, or clean the connectors with a clean pencil eraser.
No display	<ul> <li>* The monitor and/or power cable is not properly plugged in.</li> <li>* The monitor is not turned on.</li> <li>* The brightness and/or contrast control on the monitor is not turned up far enough.</li> <li>* Computer is turned on.</li> <li>* All jumpers and switched are set correctly.</li> </ul>
F1 SETUP error when you start up the system.	* The Setup utility was not run.
Distorted images or a blank screen when you run your software.	* The software is not configured or compatible with the VGA graphics adapter's current video configuration Run VGA.EXE.
No keyboard action	<ul> <li>* Keyboard cord is plugged in solidly.</li> <li>* Computer power switch is pressed to the "on" position.</li> </ul>
Setup problems	<ul> <li>* System cords are plugged in solidly.</li> <li>* Expansion adapters are properly seated.</li> <li>* All jumpers and switches are set correctly.</li> <li>* Hardware information entered with the Setup utility is correct.</li> <li>* CMOS RAM battery is properly connected.</li> </ul>
Options not working	<ul> <li>* Expansion adapter is properly seated.</li> <li>* System cords are plugged in solidly.</li> <li>* All jumpers and switches are set correctly.</li> <li>* Setup program is executed after installation.</li> <li>* Hardware information entered with Setup is correct.</li> <li>* CPU clock speed is set correctly.</li> </ul>

L\_\_\_\_\_J