

INTERRUPT LINES

Sound Blaster Pro supports four different interrupts for DMA transfer. The four interrupts are 2, 5, 7, and 10. The factory default setting is interrupt 5. The following table shows the interrupt assignments for the PC.

INTERRUPT	DESCRIPTION
IRQ 0	System Timer
IRQ 1	Keyboard
IRQ 2	Second interrupt controller. Free if not used by adapter or software.
IRQ 3	Free or (COM Port 2)
IRQ 4	COM Port 1
IRQ 5	Sound Blaster Pro
IRQ 6	Diskette Controller
IRQ 7	Free
IRQ 10	Free

DMA CHANNELS

The DMA channel on Sound Blaster Pro can be selected from DMAs 0, 1, and 3. The factory default DMA channel is 1.

DMA CHANNEL	DESCRIPTION
DMA Channel 0	Free
DMA Channel 1	Sound Blaster Pro
DMA Channel 2	Diskette Controller
DMA Channel 3	Free