

---

# Contents

License Agreement for Machine Code . . . . .	iii
Statement of Limited Warranty . . . . .	iv
<b>About This Book</b> . . . . .	xiii
Related Publications . . . . .	xiii

---

## Part 1. 7563 Passive Backplane System Information

<b>Chapter 1. Overview of the 7563 Passive Backplane System</b> . . . . .	1-1
General Layout of Components . . . . .	1-2
Specifications . . . . .	1-4
Power Supply . . . . .	1-4
Heat Output . . . . .	1-4
Environment . . . . .	1-4
Agency and Standards Compliance . . . . .	1-5
<b>Chapter 2. Installing Your System Unit</b> . . . . .	2-1
Before You Begin . . . . .	2-1
Step 1. Unpack Your System Unit . . . . .	2-1
Step 2. Check the Voltage Setting . . . . .	2-2
200-Watt Power Supply . . . . .	2-2
330-Watt Power Supply . . . . .	2-2
Step 3. Install Internal Options . . . . .	2-2
Step 4. Install the Feet on the System Unit . . . . .	2-3
Step 5. Connect the Cables . . . . .	2-3
Step 6. Perform Power-Up and Check-Out Procedure . . . . .	2-4
Step 7. Run the Configuration/Setup Utility Program . . . . .	2-5
Step 8. Finish the Installation . . . . .	2-5
<b>Chapter 3. Installing Options</b> . . . . .	3-1
Switching Off Power and Disconnecting Cables . . . . .	3-1
Opening the System Unit . . . . .	3-2
Removing the SBC . . . . .	3-3
System Memory (SIMMs) . . . . .	3-4
Installing SIMMs . . . . .	3-5
Installing Cache Memory . . . . .	3-7
Installing a PMC Card . . . . .	3-8
Reinstalling the SBC . . . . .	3-8
Installing Adapters . . . . .	3-9
Installing an Internal Hard Drive . . . . .	3-10
<b>Chapter 4. Operating and Configuring Your System</b> . . . . .	4-1
Operator Information . . . . .	4-1
Starting Up Your System . . . . .	4-2
Installing an Operating System . . . . .	4-2
Installing Application Programs . . . . .	4-2
Security Features . . . . .	4-2
Startup-Sequence Control . . . . .	4-4
Keyboardless Operation Mode . . . . .	4-4

Configuration Information	4-4
Using the Configuration/Setup Utility Program	4-6
Device Drivers	4-20
Interrupt and DMA Assignments	4-21
Jumpers and Switches	4-22
Memory-Retention Battery	4-22
Serial Port	4-23
Parallel Port	4-24
Universal Serial Bus	4-26
Watchdog Timer and Thermal Monitor	4-26
SVGA Video	4-27
System Programs	4-29

<b>Chapter 5. Solving Problems</b>	5-1
Diagnostic Tools	5-1
Testing the System Unit	5-2
Starting the System Unit	5-2
Starting the Diskette-Based Diagnostic Program	5-3
Troubleshooting Charts	5-4
Error Messages	5-9
POST Messages	5-10
Diagnostic Messages	5-13

---

## Part 2. Technical Information

<b>Chapter 6. IBM Single-Board Computer</b>	6-1
586U and 586EU SBC Component Layout	6-2
Memory Subsystem	6-3
Indicators	6-3
I/O Connectors	6-5
Miscellaneous Connectors	6-9
Jumpers and Switches	6-11
Configuration Switch	6-11
 <b>Chapter 7. IBM Analog Video PMC Form Factor Card</b>	 7-1

---

## Part 3. Hardware Maintenance Information

<b>Chapter 8. Service Information</b>	8-1
Configuration/Setup Utility Program	8-1
Downloading System Support Programs and BIOS Updates	8-2
Vital Product Data	8-2
Flash (BIOS/VPD) Update Procedure	8-2
Diagnostic and Test Tools	8-3
Power-On Self-Test (POST)	8-3
Error Messages	8-4
QAPLus/PRO Diagnostic Program	8-5
General Checkout	8-10
Keyboard	8-12
USB Ports	8-13
Printer	8-15
Power Supply	8-15

Backplane Power-Supply Connections . . . . .	8-16
Display . . . . .	8-17
Symptom-to-FRU Index . . . . .	8-17
Beep Symptoms . . . . .	8-18
No Beeps . . . . .	8-19
Numeric Error Codes . . . . .	8-20
Error Messages . . . . .	8-24
Miscellaneous Symptoms . . . . .	8-29
Hard Disk Drive Boot Error . . . . .	8-31
Undetermined Problem . . . . .	8-31
Removal and Replacement Procedures . . . . .	8-32
Removing Power and Disconnecting Cables . . . . .	8-32
Removing the System Unit Cover . . . . .	8-33
Removing and Replacing Adapters . . . . .	8-34
Removing and Replacing a Drive in the Drive Cage . . . . .	8-35
Removing and Replacing a CD-ROM Drive . . . . .	8-36
Removing and Replacing a Hard Drive in the 5.25-Inch Bay . . . . .	8-37
Removing and Replacing the Power Supply . . . . .	8-38
Removing and Replacing the Front Fan . . . . .	8-39
Removing and Replacing the Rear Fan . . . . .	8-40
Removing and Replacing an LED Assembly . . . . .	8-41
Removing and Replacing the Reset or On/Off Switch . . . . .	8-41
Removing and Replacing the IBM SBC . . . . .	8-42
Replacing the Processor . . . . .	8-44
Replacing a Video PMC Card or Keyboard/Mouse Cable . . . . .	8-47
Removing and Replacing the Backplane . . . . .	8-48
 <b>Chapter 9. Parts Catalog . . . . .</b>	 9-1
IBM Service Parts Warranty . . . . .	9-1
IBM SBC, Backplane, Drives, and Power Supply . . . . .	9-2
Cables and Fans . . . . .	9-4
Covers and Chassis . . . . .	9-6
Mouse . . . . .	9-8
Keyboards . . . . .	9-8
Power Cords . . . . .	9-8

---

## Part 4. Appendixes

<b>Appendix A. System Records . . . . .</b>	<b>A-1</b>
 <b>Appendix B. Jumpers, Switches, and Pin Assignments . . . . .</b>	 <b>B-1</b>
Hard Disk Drive Jumper Settings . . . . .	B-2
Backplane Connectors . . . . .	B-5
SBC Connectors . . . . .	B-6
SBC Settings . . . . .	B-7
Serial Port Pin Assignments . . . . .	B-9
 <b>Appendix C. Interrupt and DMA Assignments . . . . .</b>	 <b>C-1</b>
Interrupt Request Assignments . . . . .	C-1
DMA Channel Assignments . . . . .	C-2
 <b>Appendix D. S3 Trio64V+ Super VGA Driver Installation . . . . .</b>	 <b>D-1</b>
Default Resolutions . . . . .	D-1

Operating Systems . . . . .	D-1
Selecting a Monitor Using the Configuration/Setup Utility Program . . . . .	D-2
Installing Windows 3.1 Video Drivers . . . . .	D-2
Alternative Method for Changing Resolutions . . . . .	D-3
Updating the Windows 3.1 Video Driver . . . . .	D-3
Installing Windows 95 Video Drivers . . . . .	D-4
Alternative Method for Changing Resolutions . . . . .	D-4
Installing Windows NT Video Drivers . . . . .	D-5
Installing OS/2 and OS/2 Warp Video Drivers . . . . .	D-5
Installing Video Drivers for CAD Panacea . . . . .	D-6
Installing Video Drivers for MicroStation PC . . . . .	D-7
 <b>Appendix E. Notices</b> . . . . .	 E-1
Trademarks and Service Marks . . . . .	E-1
Required Electronic Emission and Connectivity Notices . . . . .	E-2
Class A Federal Communications Commission Statement . . . . .	E-2
Industry Canada Compliance Statement . . . . .	E-2
United Kingdom . . . . .	E-2
European Union (EU) Electromagnetic Compatibility Directive . . . . .	E-2
Germany . . . . .	E-3
Safety Notices (Multi-Lingual Translations) . . . . .	E-4
Safety Information . . . . .	E-10
General Safety . . . . .	E-10
Electrical Safety . . . . .	E-11
Safety Inspection Guide . . . . .	E-14
Handling Electrostatic-Discharge-Sensitive Devices . . . . .	E-15
Grounding Requirements . . . . .	E-15
Laser Compliance Statement . . . . .	E-15
German Power Switch Statement . . . . .	E-16
Power Cord Notice . . . . .	E-16
 <b>Index</b> . . . . .	 X-1